

# Montageanleitung / Mounting instructions F252



F252 Passend für BMW S 1000 XR ab 2020

## Lieferumfang

- 1x Satz L+R (1+2)
- 4x Torx Schraube M8x60 (3)
- 4x Unterlagscheibe für M8 Schraube (4)
- 1x Allgemeine Betriebserlaubnis
- 1x Montageanleitung & Montagehinweise

### 1. Demontage

Entfernen Sie die originale Lenkerbefestigung.

### 2. Montage

Lenkererhöhungen links und rechts (1+2) einsetzen. Lenker einsetzen und ausrichten, **originale** obere Lenkerklemmung aufsetzen und mit gelieferten Schrauben M8x60 (3) und Unterlagscheiben (4) befestigen (23Nm) - siehe Abbildung (1) rechts. Die obere **originale** Klemmung ist vorne (in Fahrtrichtung) ohne Spalt zu verbauen -siehe Abbildung (2)rechts.

**3. Hinweis:** Bitte achten Sie nach erfolgter Montage darauf, dass auch bei voll eingeschlagenem Lenker der Brems- und Kupplungsschlauch, Züge und Kabel weder spannen noch scheuern. In den meisten Fällen ist die Bremsleitung sehr knapp. Hier empfehlen wir unseren Bremsleitungsadapter (26872). Der Kupplungszug muss in der Regel direkter verlegt und etwas aus dem Fahrzeug gezogen werden. Darauf achten das der Lenker nicht zu stark zum Fahrer geneigt ist, da sonst die Leitungen unter Spannung stehen können.

Abb.1


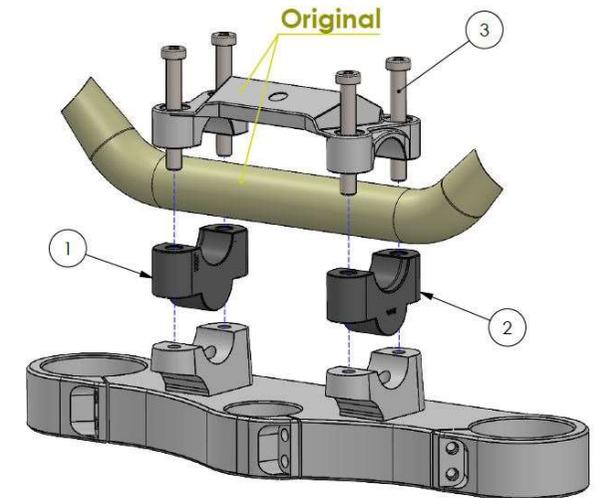


Abb.2



# Montageanleitung / Mounting instructions F252

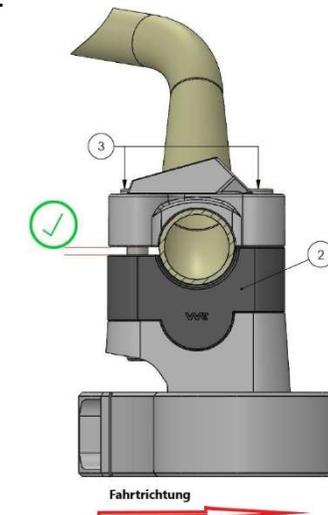

F252 Fits at BMW S 1000 XR from 2020

## content of delivery:

- 1x set handlebar L+R (1+2)
- 4x Torx screw M8x60 (3)
- 4x washer for M8 bolt (4)
- 1x product certificate
- 1x fitting instructions

### 1. removing


Remove the original handlebar clamp.

### 2. mounting

Insert handlebar risers left and right(1+2). Insert the handlebar and align it, place the original handlebar clamp and fasten with the supplied screws (3) and washer (4) - see illustration (1). The upper clamp must be fitted at the front (driving direction) without a gap- see illustration (2).

**3. Advice:** After installation, please ensure that even with the handlebars fully turned in, the brake and clutch hose, cables and cables neither tension nor chafe. In most cases the brake hoses are very short. In these cases we recommend our brake hose extension (26872). The clutch cable usually has to be laid more directly and pulled out of the vehicle a little. Make sure that the handlebars are not tilted too far towards the driver, otherwise the cables may be under tension.

III.1

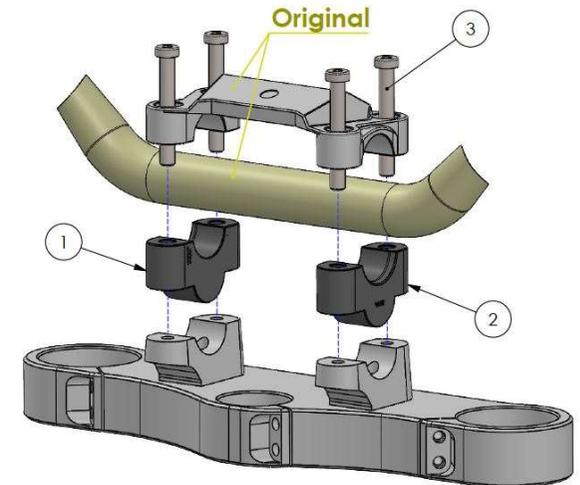

III.2

