

Montageanleitung

Mounting instructions



Lenkererhöhungen
Risers

31568-SL

Passend für / fits for:

BMW R1200GS 2012 → 2018

BMW R1250GS 2018 →

BMW R1250RT (Rohrlenker/tube handlebars) 2018 →

BMW S1000XR 2014 → 2019





Lieferumfang:

- 2x obere Klemmung / Lenkererhöhung (1)
- 2x untere Klemmung / Lenkererhöhung (2)
- 2x Klemmbock (3)
- 2x Aufnahme der Lenkererhöhung (4)
- 4x M8x22 Innensechskantschrauben (5)
- 2x M10x25 Senkkopfschraube Innensechskant (6)
- 4x M8x25 Innensechskantschrauben (7)
- 4x Schraubenkappen
- 1x Allgemeine Betriebserlaubnis
- 1x Montageanleitung & Montagehinweise

Hinweis: Drehmoment: M8=23Nm, M10=42Nm. Höhenversatz bei der Aufnahme der Lenkererhöhung (4) achten!

Untere Klemmung einsetzen: Beim Einsetzen des Klemmbockes (3) M10x25 Senkkopfschraube nur so tief einschrauben, das die untere Klemmung (2) eingeschoben werden kann. Anschließend untere Klemmung (2) ausrichten und festziehen.

ACHTUNG! Die Lenkerklemmungen rechts und links **gleichmäßig** ausrichten (Rasterpunkt) und nur bis maximal Markierung positionieren.

Bitte achten Sie nach erfolgter Montage darauf, dass auch bei voll eingeschlagenem Lenker der Bremschlauch, Züge und Kabel weder spannen noch scheuern. Sollte dies dennoch der Fall sein, müssen diese getauscht oder verlängert werden.

Content of delivery:

- 2x upper clamp / handlebar riser (1)
- 2x lower clamp / handlebar riser (2)
- 2x clamping bracket (3)
- 2x fitting socket for riser (4)
- 4x M8x22 allen bolts (5)
- 2x M10x25 countersunk bolts (6)
- 4x M8x25 allen bolts (7)
- 4x screw caps
- 1x product certificate
- 1x mounting instructions

Advice:

For enclosed screws: Torque: M8=23Nm, M10=42Nm. Check for height offset when mounting the handlebar riser (4)!

Insert lower clamp: When inserting the clamping block (3), screw in the M10x25 countersunk screw only deep enough to allow the lower clamping (2) to be inserted. Then align and tighten the lower clamp (2).

ATTANTION! Align the handlebar clamps **evenly** on the right and left (grid point) and only position them up to the maximum marking.

Once the risers are installed, make sure to check when the handlebars are at full steering angle, that there is no tension on the throttle cable, clutch and brake




Motorradzubehör

HORNIG


Upgrade your bike

www.mhornig.de

Original

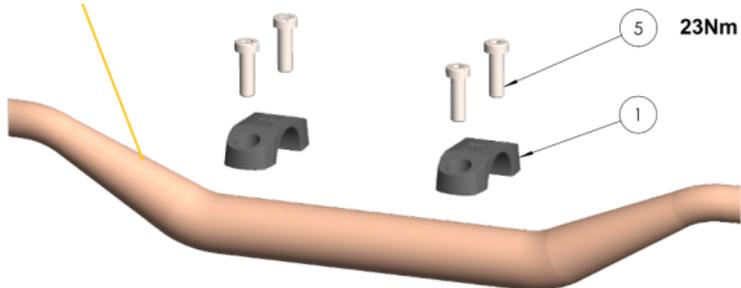

Original

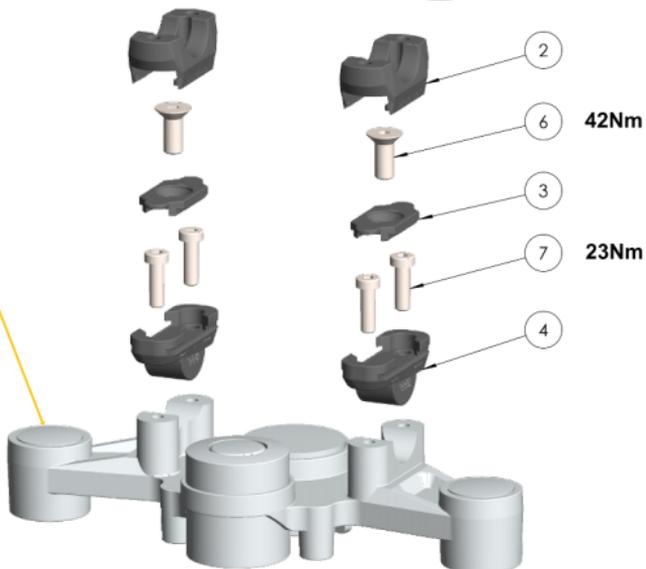



Motorradzubehör


HORNIG
Upgrade your bike

www.mhornig.de

FAHRRICHTUNG - RIDING DIRECTION



Vorne / Fahrtrichtung
Gravur beachten!
*Front riding direction
Note engraving!*

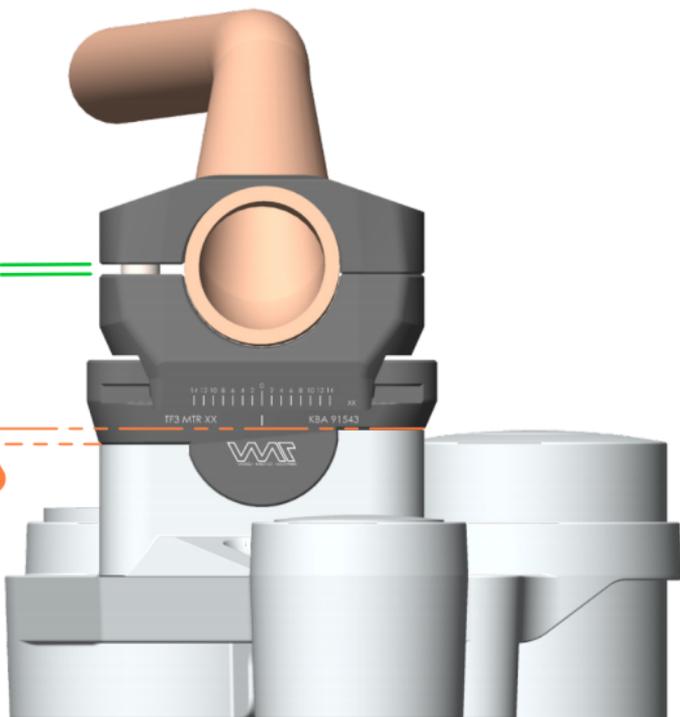

www.vmt.de